

## Button Features

### 8. Line Buttons:

- Line 1 Selects the Primary phone line
- Line 2 may provide access to:
  - Secondary phone line
  - Speed-dial numbers

### 9. Message Button: Log into Voicemail

### 10. Directory Button: Access Directories

#### A. Company Directory:

- Press the Directories button
- Select Corporate Directory using Navigation button
- Using dial pad, enter search criteria, then press Search
- Press Dial in order to call desired party

#### B. Missed, Received and Placed Call Log:

- Press the Directories button
- Select Missed Calls, Received Calls or Placed Calls
- Navigate call using Navigation button
- Press Dial softkey in order to dial highlighted number

#### C. Edit Dial: (Edit a number selected from a Directory or Call Log)

- Press EditDial softkey
- Use the << and >> softkeys to delete/add numbers
- Press Dial softkey

### 11. Applications Button: Pre Programmed by your Systems Administrator

### 12. Setting Button: Set User Preferences

### 13. Volume: Adjust volume up and down, press Save softkey to save changes



### 14. Headset Button: Press to enable headset feature


### 15. Mute Button: Press to enable mute feature

### 16. Speaker Button: Press to enable speaker phone feature



## Cisco IP Phone 6945

Quick Reference Guide  
Call Manager Version 7.X

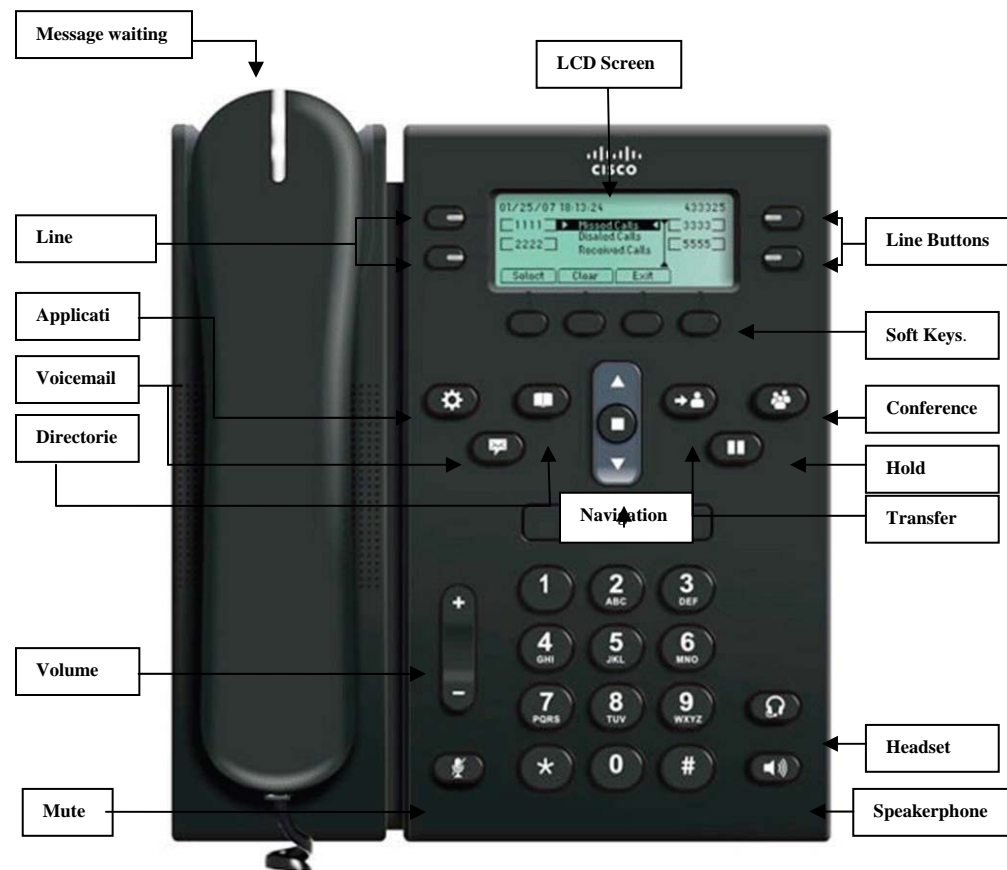

Basic Phone Features

## 1. Basic User Information:

### A. Placing a call:

- Lift handset, dial number, or
- Press NewCall softkey, dial number (engages speaker phone), or
- Press NewCall softkey, dial number, lift handset, or
- Press Speaker button, dial number

### B. Ending a Call:

- Replace handset, or
- Press EndCall softkey, or
- Press Speaker button (if on speaker phone)

### C. Answering a Call:

- Lift handset, or
- Press Answer softkey (engages speaker phone), or
- Press Speaker button

### D. Redial Feature:

- Lift handset and press the Redial softkey

### E. Call Back Feature:

- While listening to ringing or busy tone, press CallBack softkey
- When person becomes available, you will receive notification

## 2. Placing a Call On Hold/Resuming the Call:

- Press the Hold softkey
- Press the Resume softkey

## 3. Transferring a Call:

- With connected call, press Transfer softkey
- Dial number to which you are transferring, or  
Press \*extension/voice mailbox number to transfer to voicemail
- Listen for ringing or announce caller
- Press Transfer softkey again to complete transfer
  
- In order to retrieve caller during the transfer process, press the EndCall softkey, then press the Resume softkey to connect with original caller

## 4. Alternatives to Answering:

### 1. iDivert:

- Press iDivert softkey in order to send caller to voicemail

### 2. Do Not Disturb:

- Press the "Do Not Disturb" soft key to activate
- Press the "Do Not Disturb" soft key to cancel

## Advanced Phone Features

### 5. Call Forward Feature: (Forward incoming phone calls to alternate phone number)

- Press the C\_fwdAll softkey
- Dial forwarding number, or  
press the Messages button to have all calls forwarded to voicemail
- To cancel, press C\_fwdAll softkey again

### 6. Call Park Feature: (Held call that can be retrieved from any Cisco IP Phone)

- With call connected, press More softkey
- Press Park softkey
- Remember the assigned call park "slot number"  
**1110 - 1139**
- To retrieve parked call: Dial slot number on any Cisco IP Phone

### 7. Conference Calling:

#### A. Conference (Join Multiple callers together, maximum participants - 8 )

- To initiate a conference call: Begin with caller (A) on line
- Then press More softkey
- Then press Confn softkey
- Caller (A) is now on hold while you dial other participants to join
- Connect with caller (B) by dialing number, press More softkey, then Confn softkey
- Now you are conferenced with callers (A) and (B)
- Repeat above steps until desired or maximum amount of participants are included in conference call

#### B. Meet-Me Conference (Participants dial in to join conference)

Internal Meet-Me Numbers:

Maximum Amount of Participants: **8**

- To Initiate /Chair a Meet-Me conference, press More softkey
- Then press MeetMe softkey
- Dial Meet-Me number, now other callers can join  
**1150 - 1159**
- To Join a Meet-Me conference, dial Meet-Me number

#### C. Conference List (View and Remove conference participants)

- Note: Cannot use Conference List with Meet -Me
- While conference is in process, press More softkey
- Then press Conflist softkey, all participants will be listed
  
- To remove participant, press Remove softkey – only conference call originator can remove participants (not on Meet-Me)
  
- Press Update softkey to update list of participants